

## Aria® Auto Expulsion Valve Insert

Part Nr./Ref: CA400-V



### INSTALLATION INSTRUCTIONS



**Please read all instructions carefully following all precautions and safety instructions**

#### To Disassemble For Cleaning/ Servicing:

Insert the tip of the long end of the Aria Valve Tool (CA300-AVT) or the tip of a flat screw driver into the slot underneath the valve cap. Twist gently until valve cap loosens and remove cap to expose spring, rubber diaphragm and vent spool. Once completely disassembled, the Aria Auto Expulsion Valve Insert will be in 5 pieces (Valve cap, spring, rubber diaphragm, vent spool and threaded valve body).

Clean parts with warm water and soap then dry thoroughly.

#### To Reassemble:

1. Place the vent spool firmly into the center of the valve body.
2. Place rubber diaphragm (plastic side up) into the valve body over the vent spool.
3. Center spring over diaphragm and vent spool.
4. Snap on valve cap.